



Earthwork Takeoff and GPS Modeling Solutions

20 Wildbriar Rd  
Rochester, NY 14623  
877.746.7483 (US & Canada)  
800.748.3435 (Puerto Rico)  
[www.insitesoftware.com](http://www.insitesoftware.com)

## InSite SiteWork and Field General Release 19 System Requirements

**DO NOT INSTALL ON ANY SYSTEM WHICH DOES NOT MEET THE FOLLOWING  
MINIMUM REQUIREMENTS!**

Select the system icon in the Windows control panel to check the system specifications.

- **Operating System:** Windows 10
- **System RAM:** 8 GB RAM minimum. Importing large CAD files requires more RAM
- **Two Monitors:** During training two monitors are required. Two monitors also provide maximum productivity. A trained estimator can use InSite SiteWork on one monitor. Non-4K TV's are low resolution and unsuitable.
- **One USB Port:** A USB port for the training headset.
- **Mouse:** Touchpads do not provide suitable precision.
- **Internet connection:** An internet connection is required for product activation.

***On-Line Training class requirements:** Students who use a speakerphone or audio played through the computer speakers will be muted due to feedback. Interaction with the instructor will be through typed messages using a chat app.*